


Perkadox 16-GB70

Di(4-tert-butylcyclohexyl) peroxydicarbonate

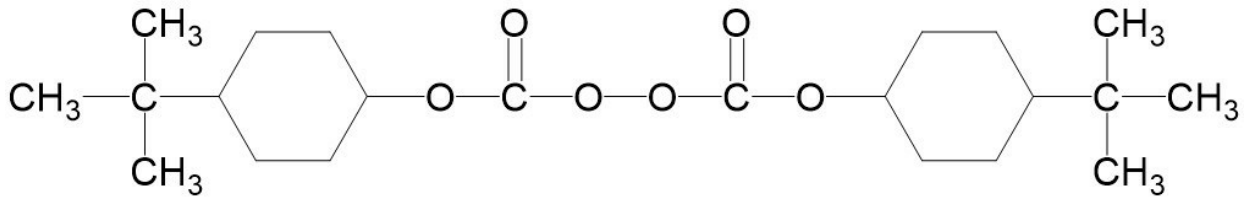

Peroxydicarbonate, 70% in organic carrier mixture, used for curing unsaturated polyester resins and (meth)acrylic resins in the temperature range of 60°C and higher. Ideal combination of low activation temperature and relatively high storage temperature.

CAS number
15520-11-3

EINECS/ELINCS No.
239-557-1

TSCA status
Not listed yet

Molecular weight
398.5

Active oxygen content
peroxide
4.01%

Specifications

Appearance	White powder
Assay	68-72 %

Characteristics

Bulk density, 20 °C / 68 °F	280 kg/m ³
-----------------------------	-----------------------

Applications

Perkadox® 16-GB70 is a mixture of peroxydicarbonate and an organic phlegmatizer which is used for the curing of unsaturated polyester resins and methacrylic resins mainly in the temperature range of 60°C (140°F) and higher. The Perkadox® 16-GB70 powder dissolves readily in a resin formulation or styrene without the need for additional solvents. There is no need for extra handling or long mixing times.

Half-life data

The reactivity of an organic peroxide is usually given by its half-life ($t_{1/2}$) at various temperatures. For Perkadox® 16-GB70 in chlorobenzene half-life at other temperatures can be calculated by using the equations and constants mentioned below:

0.1 hr	at 82°C (180°F)
1 hr	at 64°C (147°F)
10 hr	at 48°C (118°F)
Formula 1	$k_d = A \cdot e^{-E_a/RT}$
Formula 2	$t_{1/2} = (\ln 2)/k_d$
Ea	126.39 kJ/mole
A	7.44E+15 s ⁻¹
R	8.3142 J/mole·K
T	(273.15+°C) K

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self-Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT	40°C (104°F)
Emergency temperature (T_e)	35°C (95°F)
Control temperature (T_c)	30°C (86°F)
Method	The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Nouryon recommends a maximum storage temperature

Ts max.	20°C (68°F), please see note below.
Note	When stored under the recommended storage conditions, Perkadox® 16-GB70 will remain within the Nouryon specifications for a period of at least 3 months after delivery. The Ts max of 20°C is not to be interpreted as ambient or room temperature as this differs per region and season. Perkadox® 16-GB70 has a high quality composition and to hold that it should be stored at below 20°C. At temperatures above 20°C the decomposition of Perkadox® 16-GB70 progresses fast which leads to significant loss of quality. If you have questions about this, please contact your local Nouryon account manager for advice.

Packaging and transport

The standard packaging is a 25 lbs PE bag in a box. Both packaging and transport meet the international regulations. For the availability of other packed quantities contact your Nouryon representative. Perkadox® 16-GB70 is classified as Organic peroxide type D; solid, temperature controlled; Division 5. 2; UN 3116.

Safety and handling

Keep containers tightly closed. Store and handle Perkadox® 16-GB70 in a dry well-ventilated place away from sources of heat or ignition and direct sunlight. Never weigh out in the storage room. Avoid contact with reducing agents (e. g. amines), acids, alkalis and heavy metal compounds (e. g. accelerators, driers and metal soaps). Please refer to the Safety Data Sheet (SDS) for further information on the safe storage, use and handling of Perkadox® 16-GB70. This information should be thoroughly reviewed prior to acceptance of this product.

Major decomposition products

Carbon dioxide, 4-tert-Butyl-cyclohexanol, 4-tert-Butylcyclohexanone

All information concerning this product and/or suggestions for handling and use contained herein are offered in good faith and are believed to be reliable. Nouryon, however, makes no warranty as to accuracy and/or sufficiency of such information and/or suggestions, as to the product's merchantability or fitness for any particular purpose, or that any suggested use will not infringe any patent. Nouryon does not accept any liability whatsoever arising out of the use of or reliance on this information, or out of the use or the performance of the product. Nothing contained herein shall be construed as granting or extending any license under any patent. Customer must determine for himself, by preliminary tests or otherwise, the suitability of this product for his purposes. The information contained herein supersedes all previously issued information on the subject matter covered. The customer may forward, distribute, and/or photocopy this document only if unaltered and complete, including all of its headers and footers, and should refrain from any unauthorized use. Don't copy this document to a website.

Contact Us

Polymer Specialties Americas
polymer.amer@nouryon.com

Polymer Specialties Europe, Middle East, India and Africa
polymer.emeia@nouryon.com

Polymer Specialties Asia Pacific
polymer.apac@nouryon.com

The Nouryon logo consists of a stylized blue 'N' followed by the word 'ouryon' in a lowercase, sans-serif font.