


Trigonox 22-CH80

1,1-Di(tert-butylperoxy) cyclohexane, 80% solution in odorless mineral spirits

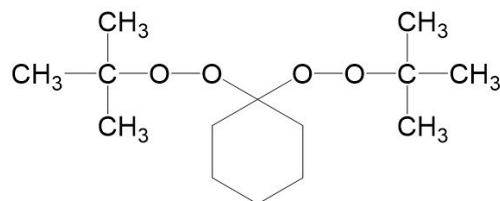

Trigonox® 22-CH80 is an initiator for (co)polymerization of acrylates and methacrylates.

CAS number
3006-86-8

EINECS/ELINCS No.
221-111-2

TSCA status
listed on inventory

Molecular weight
260.4

Active oxygen content
peroxide
12.29%

Specifications

Active oxygen	9.58-9.84 %
Appearance	Clear liquid
Assay	78.0-80.0 %
Color	≤ 30 Pt-Co / APHA
tert-Butyl hydroperoxide	≤ 0.099 %

Characteristics

Density, 0 °C	0.85 g/cm ³
Viscosity, 0 °C	2.6 mPa.s

Applications

Polymerization of styrene: Trigonox® 22-CH80 can be used for the bulk polymerization of styrene in the temperature range between 90 and 120°C. Other applications: Trigonox® 22-CH80 can also be used for the (co)polymerization of styrene, acrylonitrile, acrylates and methacrylates in the temperature range between 95°C and 125°C.

Half-life data

The reactivity of an organic peroxide is usually given by its half-life ($t_{1/2}$) at various temperatures. For Trigonox® 22-CH80 in chlorobenzene half-life at other temperatures can be calculated by using the equations and constants mentioned below:

0.1 hr	at 134°C (273°F)
1 hr	at 113°C (235°F)
10 hr	at 94°C (201°F)
Formula 1	$k_d = A \cdot e^{-E_a/RT}$
Formula 2	$t_{1/2} = (\ln 2)/k_d$
E_a	142.40 kJ/mole
A	$3.47E+15 \text{ s}^{-1}$
R	8.3142 J/mole·K
T	(273.15+°C) K

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self-Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT	60°C
Method	The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Nouryon recommends a maximum storage temperature ($T_s \text{ max.}$) for each organic peroxide product.

$T_s \text{ Max.}$	25°C
Note	When stored under these recommended storage conditions, Trigonox® 22-CH80 will remain within the Nouryon specifications for a period of at least 3 months after delivery.

Packaging and transport

Trigonox® 22-CH80 is packed in non-returnable one gallon polyethylene containers of 7 lb net weight (4 per case) and in five gallon polyethylene containers of 35 lb net weight. Both packaging and transport meet the international regulations. For the availability of other packed quantities contact your Nouryon representative. Trigonox® 22-CH80 is classified as Organic peroxide type C; liquid, Division 5. 2; UN 3103.

Safety and handling

Keep containers tightly closed. Store and handle Trigonox® 22-CH80 in a dry well-ventilated place away from sources of heat or ignition and direct sunlight. Never weigh out in the storage room. Avoid contact with reducing agents (e. g. amines), acids, alkalis and heavy metal compounds (e. g. accelerators, driers and metal soaps). Please refer to the Safety Data Sheet (SDS) for further information on the safe storage, use and handling of Trigonox® 22-CH80. This information should be thoroughly reviewed prior to acceptance of this product. The SDS is available at nouryon.com/sds-search.

Major decomposition products

Carbon dioxide, tert-Butanol, Isomers of isooctane

All information concerning this product and/or suggestions for handling and use contained herein are offered in good faith and are believed to be reliable. Nouryon, however, makes no warranty as to accuracy and/or sufficiency of such information and/or suggestions, as to the product's merchantability or fitness for any particular purpose, or that any suggested use will not infringe any patent. Nouryon does not accept any liability whatsoever arising out of the use of or reliance on this information, or out of the use or the performance of the product. Nothing contained herein shall be construed as granting or extending any license under any patent. Customer must determine for himself, by preliminary tests or otherwise, the suitability of this product for his purposes. The information contained herein supersedes all previously issued information on the subject matter covered. The customer may forward, distribute, and/or photocopy this document only if unaltered and complete, including all of its headers and footers, and should refrain from any unauthorized use. Don't copy this document to a website.

Trigonox® is a registered trademark of Nouryon Functional Chemicals B.V. or affiliates in one or more territories.

Contact Us

Polymer Specialties Americas
polymer.amer@nouryon.com

Polymer Specialties Europe, Middle East, India and Africa
polymer.emeia@nouryon.com

Polymer Specialties Asia Pacific
polymer.apac@nouryon.com

